


PRE-USE CHECKS

Please read carefully before use.




FC Aluminum Platform Truck

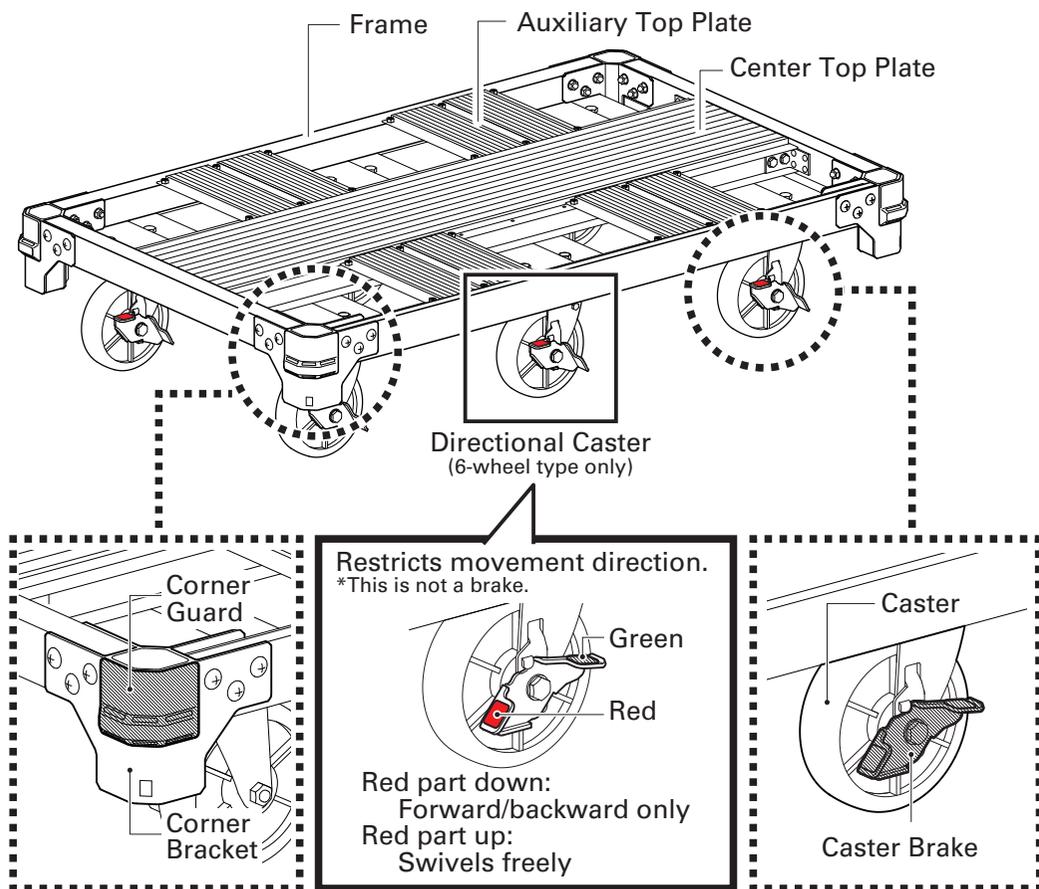

Check for Abnormalities


- Center/Auxiliary Top Plate
-Any bends or cracks?
- Corner Guard
-Is it peeling off?
- Frame
-Any bends or cracks?
- Corner Bracket
-Any bends or cracks?
- Caster
-Any issues with swiveling or rotation?
- Caster Brake
-Does it move smoothly?
-Any issues with locking or unlocking?

Checking the Locks

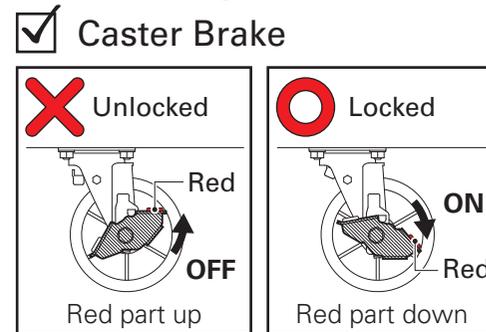

When parked, always lock the brakes on all wheels.

Checking the Path

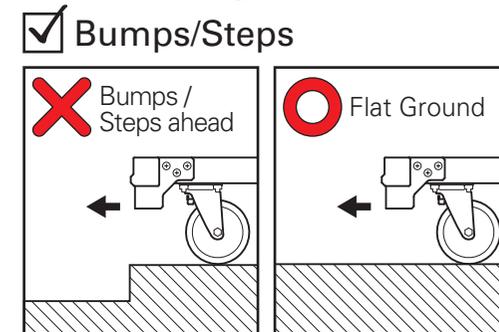

If there are steps/bumps in the path, install a ramp beforehand.

Max Load Capacity:
1000kg

Caution:
Risk of Electric Shock.



Caution:
Do not run over your feet during movement.



Caution:
Risk of pinching hand when operating.



HOW TO USE


Please read carefully before use.



FC Aluminum Platform Truck

Loading Cargo


Load cargo so its center of gravity is in the middle of the platform.

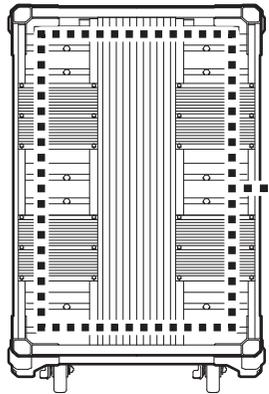

Recommended Loading Area

When Storing

Turn the four corner casters inward when viewed from the shorter side.
(It is recommended to lock the inward-facing casters).

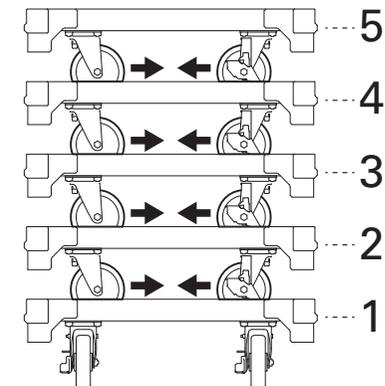



Recommended Stackable Quantity:
5 units

Stack only identical models that meet the following conditions:

- Model Type
- Size
- Number of Casters


When Parking

Always lock the caster brakes on all wheels.

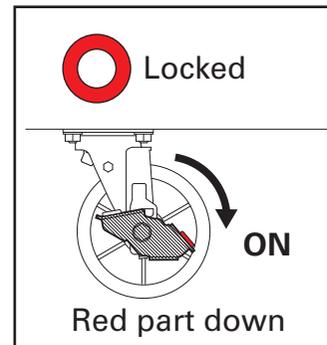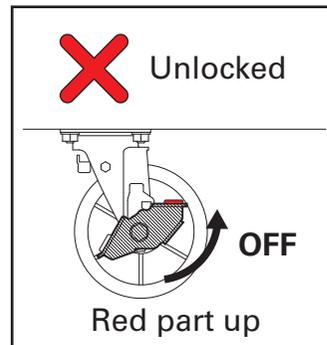

Single Pipe

Can be used with a single pipe (sold separately).

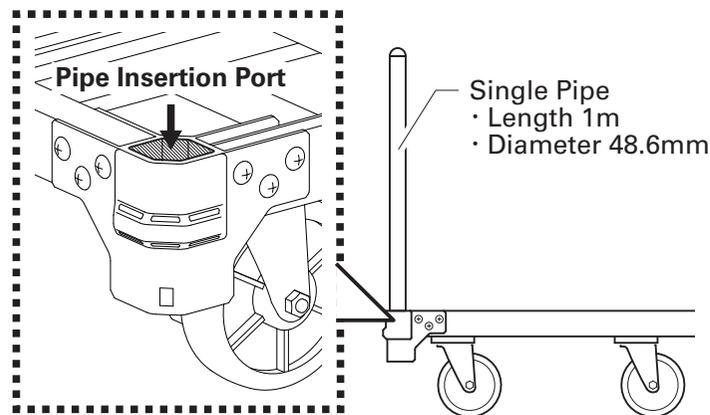

Dangerous Usage

